


Solenoid Valve - Priority Demand - WRAS Approved

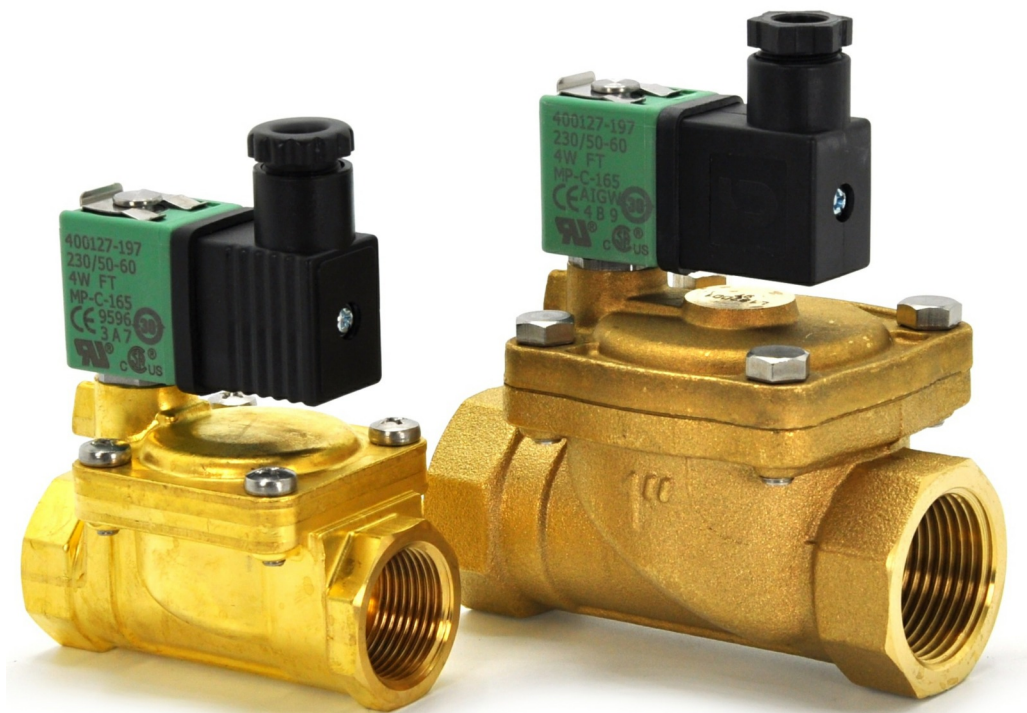

- Specification & Dimensions: **Page 2 & 3**
- Order Codes & Options: **Page 3**
- Accessories: **Page 4**
- Wiring Details IP65 Solenoid Coil: **Page 5**
- Installation & Maintenance Procedures: **Page 5**

Solenoid Valve - 2/2 - Normally Closed - WRAS Approved

Benefits & Features


- Two way normally closed pilot diaphragm
- WRAS approved certificate: 0904038
- Forged brass body
- Compact design
- IP65



Specification

Configuration	Pilot diaphragm
Port Sizes	3/8" to 1" BSP
Orifice	see table below
Kv	see table below
Body	PTFE
Media	Potable Water
Pressure ranges	0.35 - 12bar (3/8" & 1/2"), 0.35 - 10bar (3/4" & 1")
Seals	PTFE -5 to +80°C

Configuration

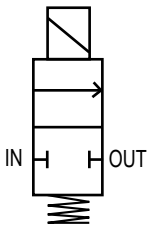



In: IN
 Out: OUT
 Coil de-energised: IN & OUT closed
 Coil energised: IN to OUT

Technical Data

Model	Orifice mm	Body Rating	Min. /Max. Operating Differential Pressures. BAR.			KV Flow Factor M3/Hr.
			Min.	Maximum		
				AC	DC	
SXL182.	10	25	0.35	12	12	2.5
SXL182.	15	25	0.35	12	12	3.8
SXL182.	20	25	0.35	10	10	5
SXL182.	25	25	0.35	10	10	12

Weights & Dimensions


	Weight Kg	Dimensions mm		
		A	B	C
3/8"	0.32	60	77	40
1/2"	0.38	66	82	40
3/4"	0.52	79	89	50
1"	1.08	105	106	71

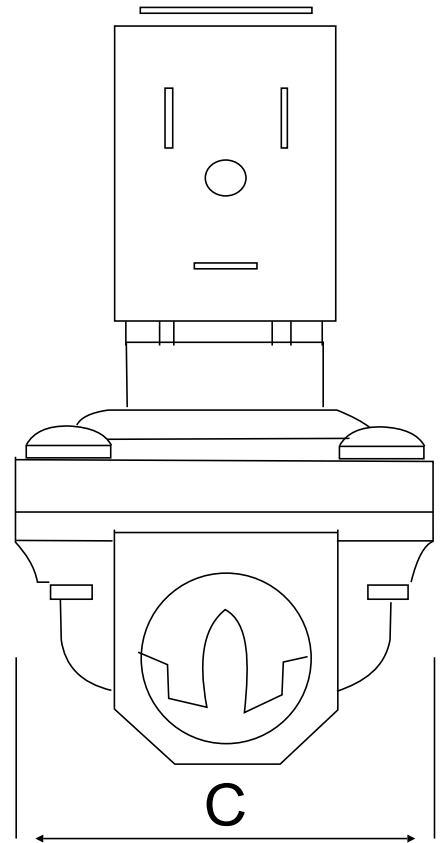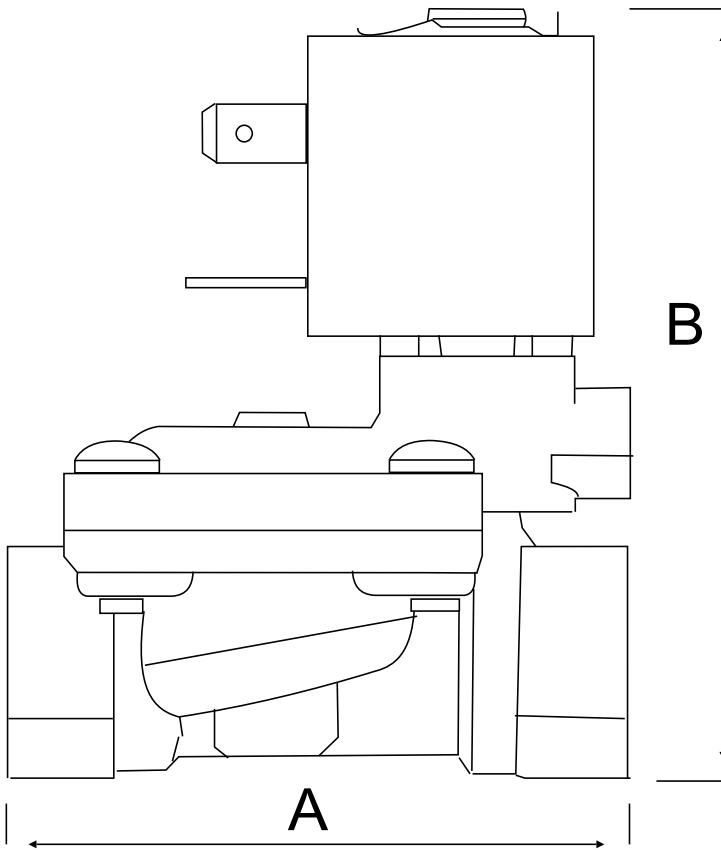

Accessories


Pre-Wired Power Supplies

- Moulded plug for easy installation
- 3 metre long ideal for most installations
- Coloured indicators shows power to valve, aids fault finding
- IP65 water tight plug

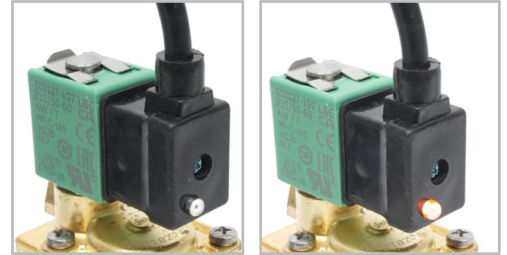

Order Code	Voltage AC/DC	Fits Body Size	Description
20220000PW0365LEDLV	0-60V	3/8" - 1"	DIN 'B'. 22mm. Protection class: IP65. 0-60V AC/DC. Nominal current 10A.
20220000PW0365LEDHV	61-240V	3/8" - 1"	DIN 'B'. 22mm. Protection class: IP65. 61-240VAC/DC. Nominal current 10A.
20221000PW0365LEDLV	0-60V	1 1/4" - 2"	DIN 'A'. 30mm. Protection class: IP65. 0-60V AC/DC. Nominal current 10A.
20221000PW0365LEDHV	61-240V	1 1/4" - 2"	DIN 'A'. 30mm. Protection class: IP65. 61-240V AC/DC. Nominal current 10A.

Priority Demand Solenoid Valves should always be installed by a qualified electrician and engineer

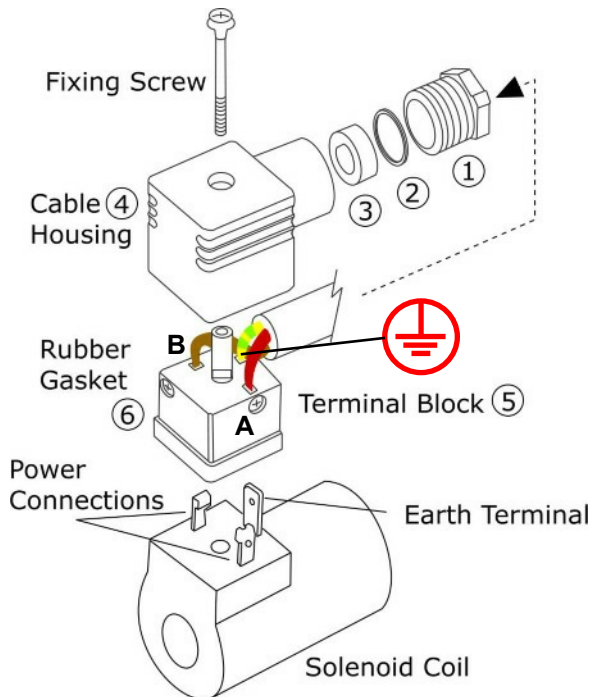

Section 1: DIN Connector Assembly

- Insert the electrical power cable through the gland assembly (1,2,3)
- Push the cable through cable housing (4)
- Connect power and earth cables to terminal block (5)
- Push terminal block (5) backwards, inside cable housing (4)
- Place rubber gasket (6) on terminal block (5) front face
- Push terminal block onto solenoid coil terminals
- Push fixing screw through complete assembly
- Tighten fixing screw with small screwdriver
- Do not over tighten
- Tighten the cable gland (1,2,3) by hand

Note:

The device is not polarity sensitive. The live or neutral can be fitted in either terminal 'A', 'B', '1' or '2' of Terminal Block '5'. The earth wire MUST be fitted in the terminal block '5' with the identification



Section 2: How to install Priority Demand Solenoid Valves

Solenoid Valves can normally be installed and operate in any orientation. However, we recommend that the Priority demand valves are installed in the horizontal plain with the solenoid coil uppermost. Contact us for further information.

Installation Procedure:


Check that the Solenoid Valve is the correct product ordered for the application, such as port size, normally closed or normally open function. Contact us for further information:

- Isolate the site electrical power supply
- Isolate the site water supply. Leave until cool/safe.
- Insert the valve onto the pipe, ensuring that the flow direction is observed.....IN for incoming media, or an arrow stamped on the valve body.
- Ensure that the pipe connections are free from burrs or loose pipe thread tape
- Ensure that the pilot hole is not blocked by thread tape or sealant in the outlet port (see pic. 1)
- Tighten all pipe joints
- Connect electrical power supply via DIN electrical socket connector, as detailed in section 1

Section 3: Maintenance Procedure for Solenoid Valves

In the unlikely event of a valve malfunction, or routine maintenance, follow these instructions:

- Isolate the site electrical power supply
- Isolate the site water supply
- Remove the solenoid coil by easing the spring clip with a screwdriver, careful to prevent loss
- Remove the coil tube stem by unscrewing anti-clockwise
- Carefully remove the plunger assembly (inside the coil stem)
- Check the plunger assembly for damage or worn seals
- Check the face inside the coil stem for foreign particles that could prevent correct operation
- Remove the top cover housing and check the diaphragm for damage and blocked transfer port
- Re-assemble the valve in reverse order, ensuring that all parts are cleaned and assembled correctly

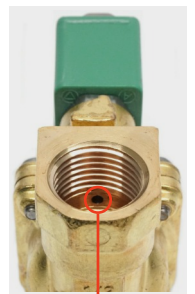

Pic. 1
Pilot Hole
Outlet Port